



# 33-04-00 & 33-05-00 COAX, LOW PROFILE, R.A., .750-40 & 1.000-32

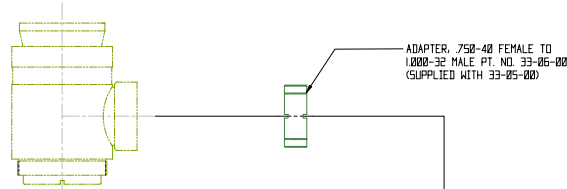

## ASSEMBLY INSTRUCTIONS FOR 33-05-00

- 1- THREAD LOW PROFILE COAX (WITH 1.000-32 ADAPTER) INTO Z100 COAX ILLUMINATOR
- 4- LOOSEN THUMB SCREW AND ROTATE LOW PROFILE COAX TO APPROXIMATE POSITION.
- 5- INSERT FIBER OPTIC FLEXIBLE BUNDLE INTO HOLE.
- 6- TIGHTEN SET SCREW.

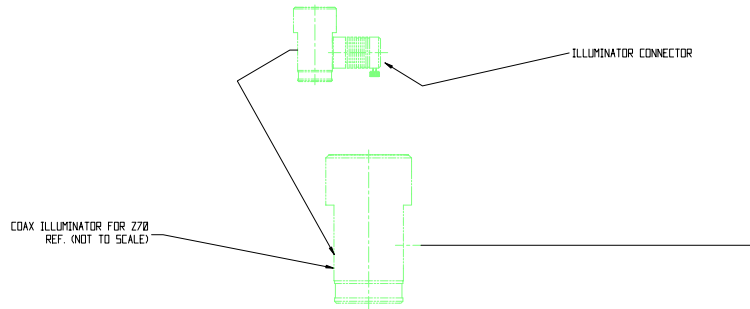

## ASSEMBLY INSTRUCTIONS FOR 33-04-00

- 1- UNSCREW ILLUMINATOR CONNECTOR FROM ZOOM.
- 2- THREAD LOW PROFILE COAX INTO Z70 COAX ILLUMINATOR
- 3- LOOSEN THUMB SCREW AND ROTATE LOW PROFILE COAX TO APPROXIMATE POSITION.
- 4- INSERT FIBER OPTIC FLEXIBLE BUNDLE INTO HOLE.
- 5- TIGHTEN SET SCREW.

## ASSEMBLY INSTRUCTIONS FOR FIBER OPTICS

- 1- SELECT FIBER OPTIC SIZE TO INSTALL.

### 1.0MM DIA. FIBER OPTIC

- 1- BACK OUT SET SCREW FAR ENOUGH TO REMOVE .8193 ADAPTER.
- 2- REMOVE ADAPTER (PT. NO. 330400-102) FROM COAX.
- 3- INSERT FIBER OPTIC CABEL INTO HOLE AND TIGHTEN SET SCREW.

### .188 DIA. FIBER OPTIC

- 1- LOOSEN SET SCREW.
- 3- INSERT FIBER OPTIC CABEL INTO HOLE AND TIGHTEN SET SCREW.

